


**SMART**  
**FIREARMS**  
TRAINING DEVICES

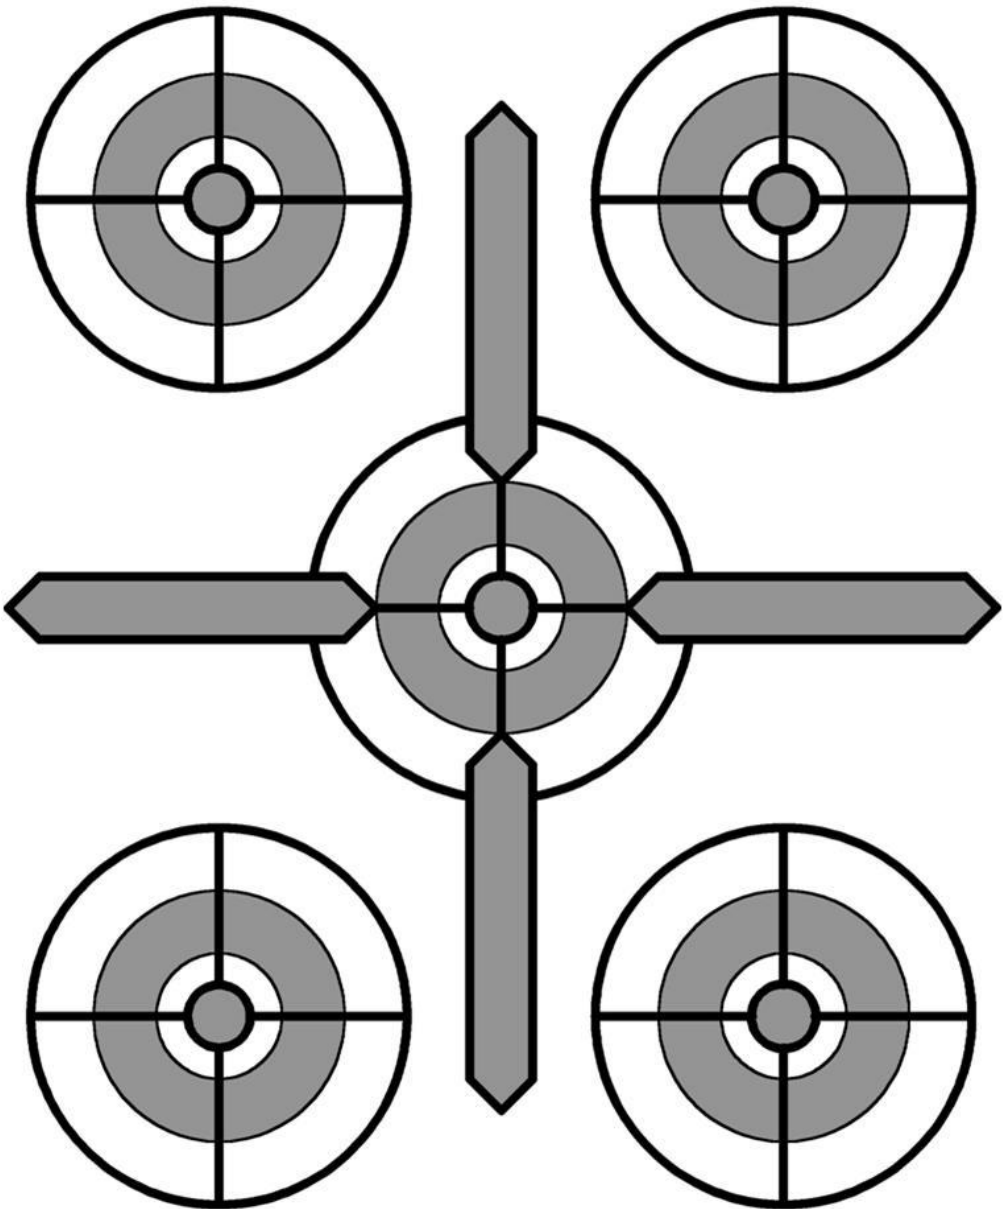

**WWW.SMARTFIREARMS.US**

## **Warning**

1. Weighted Magazine. May cause injury when ejected from Training gun.
2. Allen Key may fall from Training gun during handling
3. Front and Rear Sights removable.. Choking Hazard

## **Instructions**

### **Modes (Pro ONLY):**

The Smart Firearms Training Gun Has two modes of operation. To switch between modes, refer below to the "Set Up" Section.

### **Shot Only Mode: (Pro ONLY):**

In Shot Only mode, the gun will make a shot sound when the trigger is pulled. A green LED will emit for 9 seconds to identify that the weapon was fired (useful when multiple training weapons are involved)

### **Sensor Mode (Pro ONLY):**

In Sensor mode, the gun will make a shot sound and a green LED will emit for 9 seconds to identify that the weapon was fired (useful when multiple training weapons are involved). The Unintentional Discharge Alert Sensor will be active so that when a finger is inserted into the trigger guard but no shot is fired, an alarm will sound alerting the student and the instructor. An orange LED light on each side of the device will flash for 9 seconds after the incursion.

### **Sensor Mode Activation (Pro ONLY):**

1. Pull trigger and hold for approximately 9 seconds, an audible tone will sound.
2. Immediately remove finger from guard and ensure nothing is in the trigger guard.
3. Wait approximately 25-30 seconds. During this time the gun will make occasional tones while calibrating. Once calibrated the gun will emit two quick tones sound in a row and the green LED's will flash. The Smart Firearm is now in Sensor Mode

### **Shot Only Mode (Pro ONLY):**

1. Repeat step 1 from "Sensor Mode". Two tones will sound indicating you are now in Shot Only mode.

### **Changing batteries of Smart Firearm (Pro ONLY):**

1. Loosen the screw from the top cover
2. Take off the top cover
3. Remove the batteries
4. Place new CR123 batteries into the battery holder
5. Replace the top cover
6. Tighten screw
7. Once the batteries are changed, the Settings are reset to SHOT ONLY MODE

### **Sight Adjustment (Pro and Basic):**

1. Use included Allen key to loosen either front or rear sight.
2. Slide sight to desired position.
3. Tighten sight.

**If you are Happy with your Smart Firearms Training Gun, we would very much appreciate a quick customer rating and review. If there is anything which does not meet your satisfaction, please reach out to us directly to fix it.**

**Toll Free 1-833-602-7383 ext 2  
customerservice@smartfirearms.us**